

# DT8 DALI Dual Color Touch Controller-AC


## PRODUCT DESCRIPTION

- Touch-sensitive glass interface (white/black)
- Complies with DALI IEC 62386-209
- Built-in 100mA DALI PSU, supports up to 50 ECGs
- Powered by DALI bus when not on AC mains
- Controls up to 100 ECGs (4 panels via broadcast)
- Supports 4 DALI groups & 4 scenes
- Group/scene numbers (0-15) set by rotary switches
- Supports DT8 devices with color temperature (Tc) adjustment
- Each DT8 device uses a single DALI address


Item Number: **CT-DL-1001**



## FUNCTION INTRODUCTION

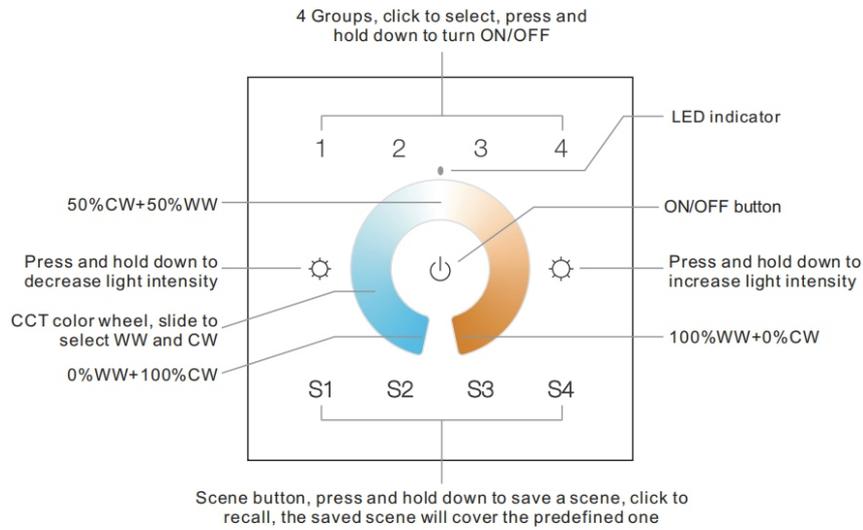

Front side

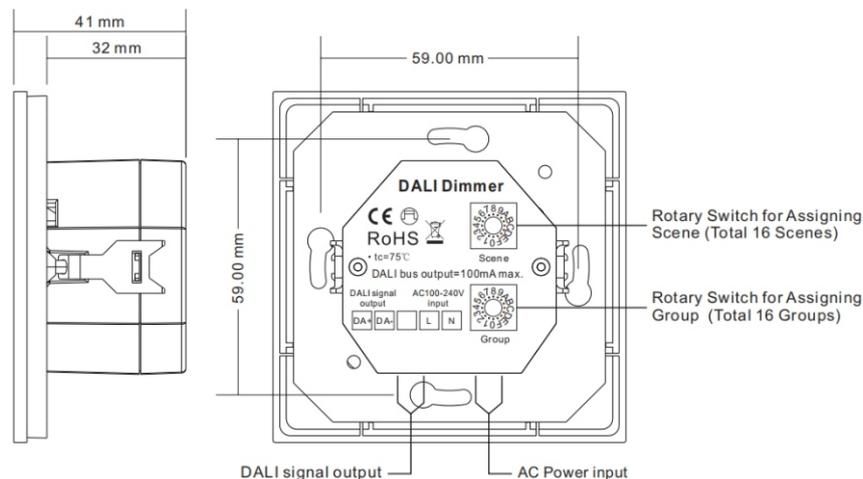

## GENERAL

Power supply	100-240VAC/DALI bus
Output	DALI signal
Operation current	<15 mA
DALI bus output	100 mA max.
DALI consumption	4 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	86x86x41mm
Waterproof grade	IP20

## SAFETY & WARNINGS

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

## OPERATION

1. Set starting Group number via rotary switch on the back: (0-15 selectable)
  - This DALI touch panel controller enables dimming commands and DT8 commands to be sent to 4 Groups of devices on the DALI circuit. A rotary switch on the back is used to select Groups you would like to control and set the starting Group number, and total 16 Groups (0-15) can be selected.
  - When the rotary switch arrow position is at 0, button 1 controls all DALI devices on the circuit via broadcast, button 2 controls DALI Group 0, button 3 controls Group 1, and button 4 controls Group 2.
  - When the rotary switch arrow position is at X except 0 (1-C), button 1 controls DALI Group X-1, button 2 controls Group X, button 3 controls Group X+1, and button 4 controls Group X+2.
  - When the rotary switch arrow position is at D, button 1 controls devices in DALI Group 12, button 2 controls devices in DALI Group 13, button 3 controls devices in DALI Group 14, and button 4 controls all devices through broadcast.
  - When the rotary switch arrow position is at E, button 1 controls devices in DALI Group 13, button 2 controls devices in DALI Group 14, button 3 controls all devices through broadcast, button 4 controls devices in DALI Group 0.
  - When the rotary switch arrow position is at F, button 1 controls devices in DALI Group 14, button 2 controls all devices through broadcast, button 3 controls devices in DALI Group 0, button 4 controls DALI group 1.

**Note:** All DALI slaves on the circuit shall be assigned to one or more DALI groups by DALI master first.

Please refer to the detailed Group setting table as follows:

Rotary Switch Position	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
DALI Group for button 1	Broadcast	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14
DALI Group for button 2	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	Broadcast
DALI Group for button 3	1	2	3	4	5	6	7	8	9	10	11	12	13	14	Broadcast	0
DALI Group for button 4	2	3	4	5	6	7	8	9	10	11	12	13	14	Broadcast	0	1

2. Set starting Scene number via rotary switch on the back: (0-15 selectable)
  - This DALI touch panel controller enables Scene selection commands for up to 4 Scenes to be sent to the DALI circuit. A rotary switch on the back is used to select Scenes you would like to control and set the starting scene number, and total 16 Scenes (0-15) can be selected.
  - When the rotary switch arrow position is at X (0-15), Scene button S1 controls Scene X, S2 controls Scene X+1, S3 controls Scene X+2, and S4 controls Scene X+3.

Rotary Switch Position	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Scene assigned to S1	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Scene assigned to S2	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	0
Scene assigned to S3	2	3	4	5	6	7	8	9	10	11	12	13	14	15	0	1
Scene assigned to S4	3	4	5	6	7	8	9	10	11	12	13	14	15	0	1	2

## INSTALLATION

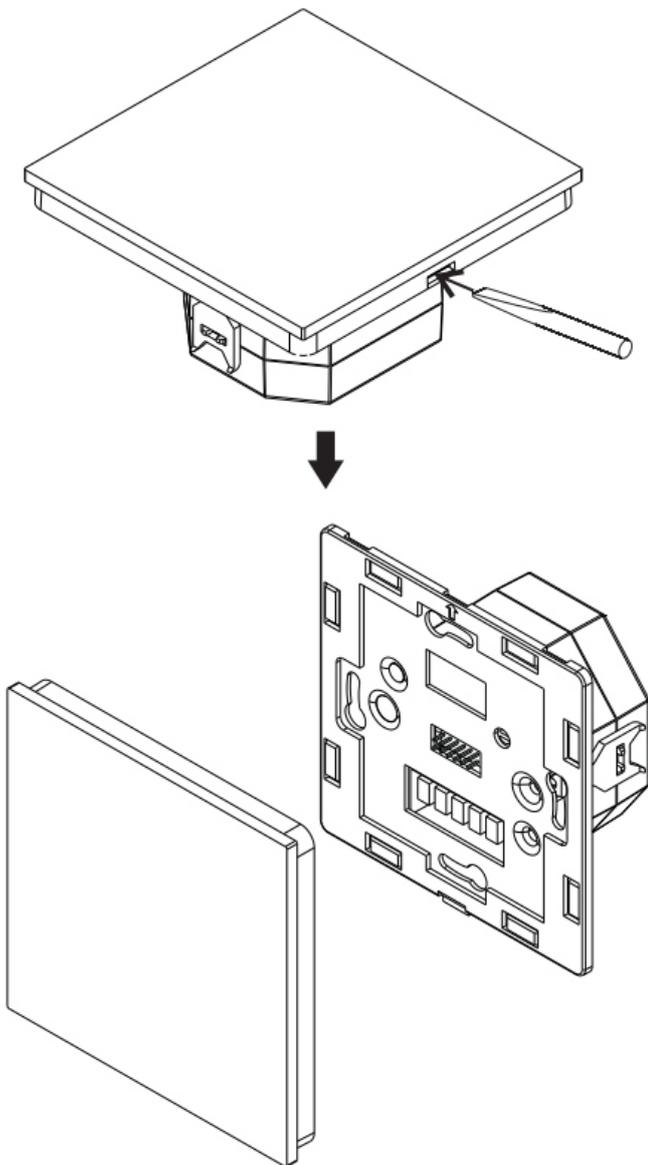


Figure 1: Wiring scheme to control up to 50 DALI ECG via broadcast or control 4 DALI groups. Wiring diagram


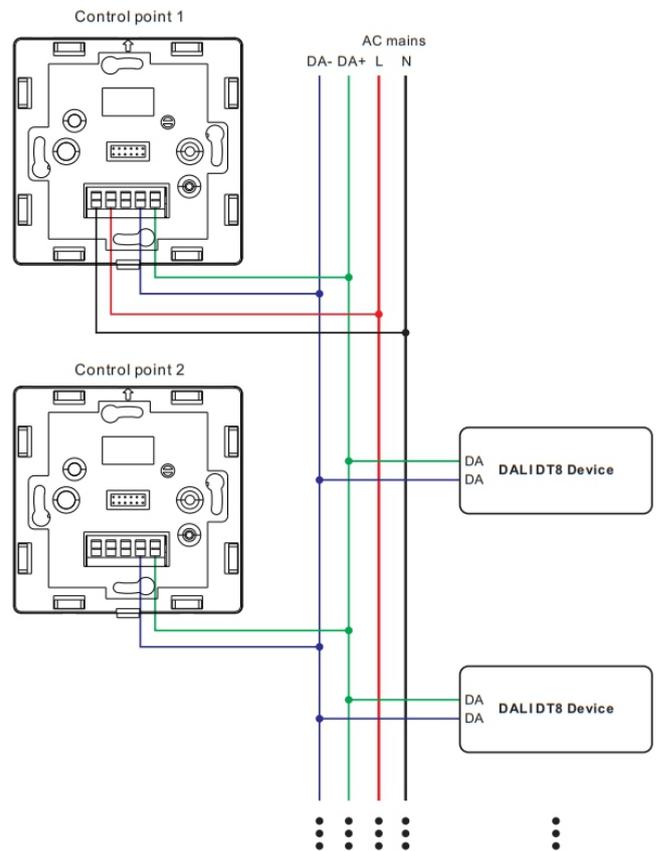


Figure 2: Wiring scheme with 2 DALI panels powered by AC mains to control up to 100 DALI ECG via broadcast or control 4 DALI groups.

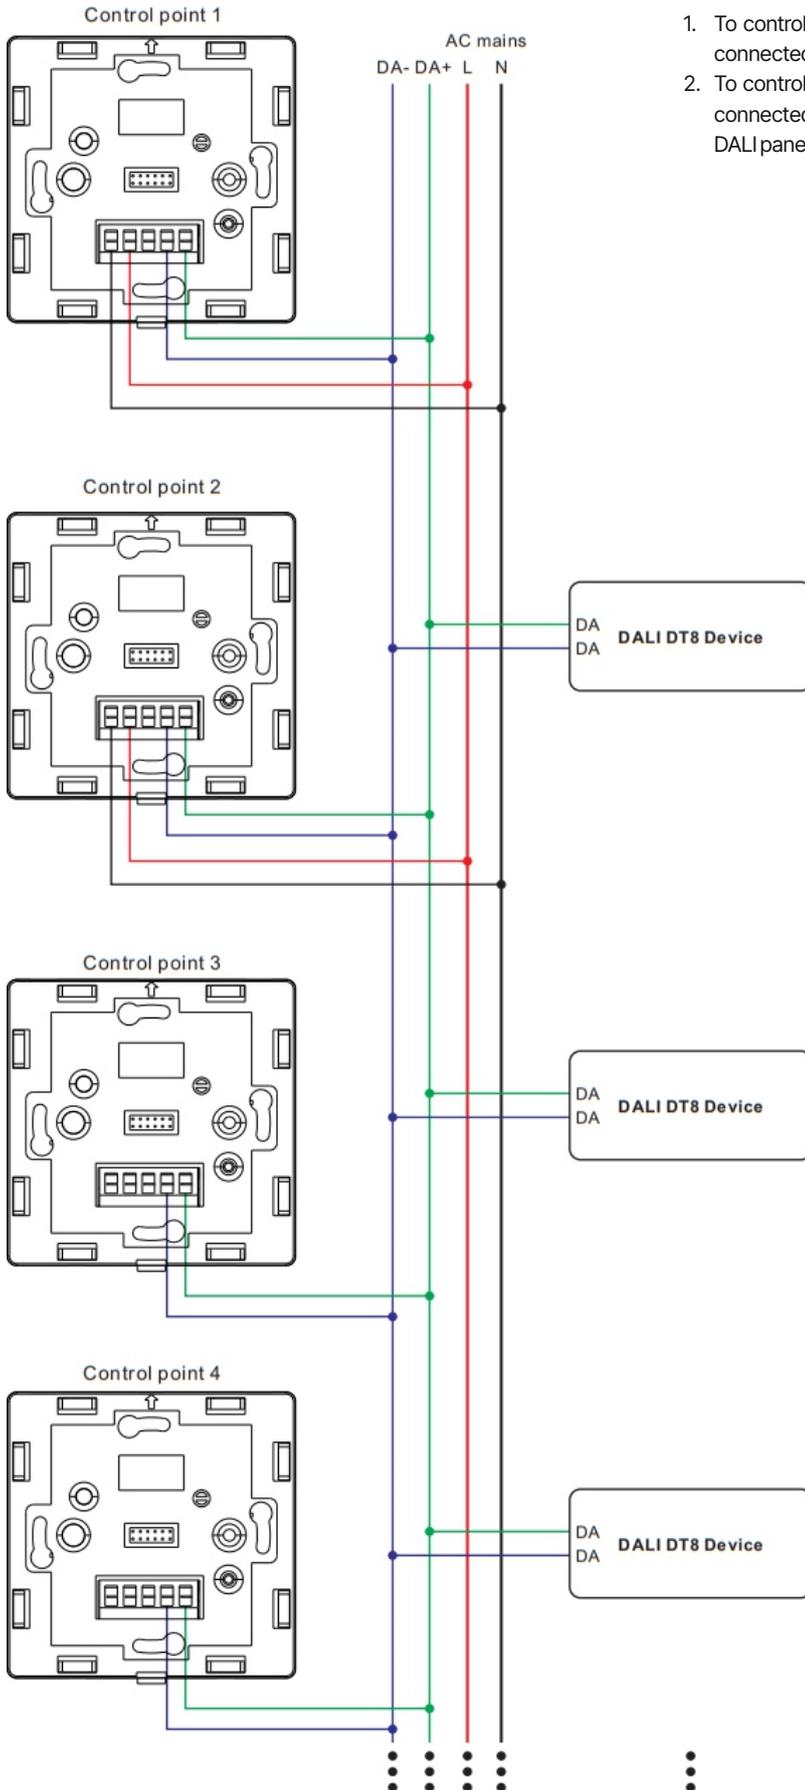

1. To control up to 100 ECG with the setup (Figure 2), there are 2 panels connected to AC mains.
2. To control up to 50 ECG with the setup (Figure 1), there is only 1 panel connected to AC mains. Other panels are powered by DALI bus. Max. 2 DALI panels can be connected to AC mains in the same control circuit.